


HOW TO INSTALL THIS TUBULAR LEVERSET

● Fit Doors 1-3/8" to 2" Thick


● Backset 2-3/8" or 2-3/4"

New Door Preparation

- A:** Fold template on edge of door mark site 2-3/8" or 2-3/4" of holes.
B: Drill a 2-1/8" hole through door (from both sides to avoid damaging door).
C: Drill a 1" hole in door edge.
D: Cut out a 2-1/4"x1"x1/8" base.



Latch Preparation

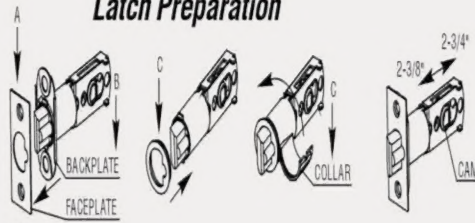


If Needed, Change Latch Faceplate

- A:** Separate faceplate from backplate as shown.
B: FOR DRIVE-IN LATCH: Rotate backplate and slide off latch.
C: Snap on drive-in faceplate and secure with collar.


Instruction For Adjustable Latch

The cam is pushed fully to the right for 2-3/4" backset.
(During the adjustment, keeping two teeth of the cam forward always.)

Install Latch

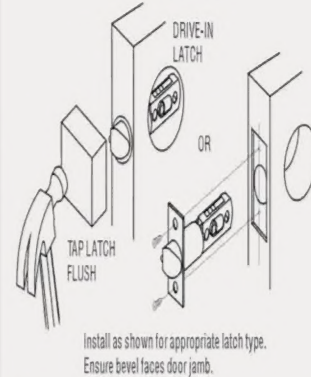

1 DISASSEMBLE INSIDE LEVER AND INSIDE ROSE

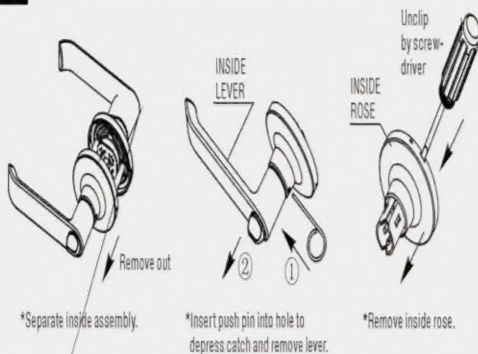


*Separate inside assembly.


*Insert push pin into hole to depress catch and remove lever.

*Remove inside rose.


2 INSTALL OUTSIDE LEVER

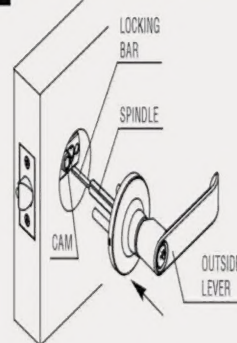

3 INSTALL INSIDE PLATE ASSEMBLY

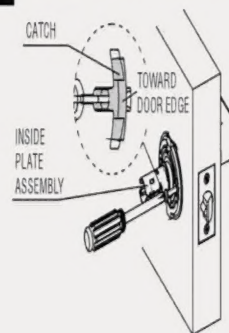


4 INSTALL INSIDE ROSE

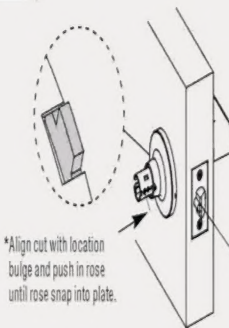


*Align out with location bulge and push in rose until rose snap into plate.

5 INSTALL INSIDE LEVER

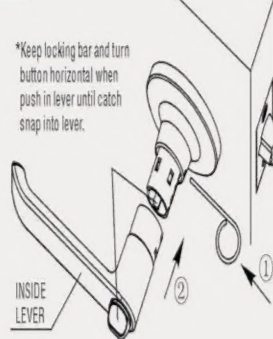

*Keep locking bar and turn button horizontal when push in lever until catch snap into lever.

6 INSTALL STRIKE

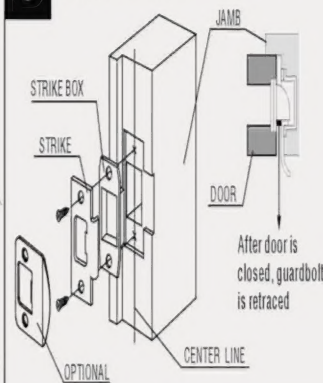

After door is closed, guardbolt is retracted